
Installation Instructions

(Please refer to the installation video on the product link, or the installation video on YouTube, or feel free to contact us directly on Amazon.)

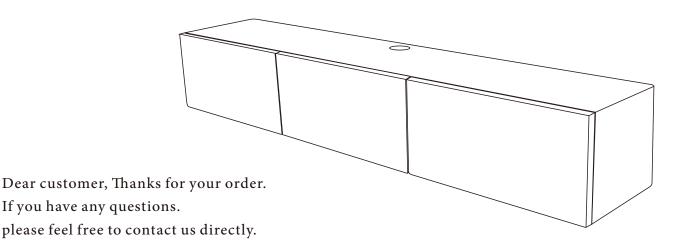

Included 8mm screws and anchors for solid brick walls. load-bearing walls. and firedhollow brick walls





If you have drywall, please use the 18mm drill bit(not included) and the toggle bolts for mounting (package included). Follow the steps below for mounting on the drywall

Step 1: Drill 18mm hole on the drywall

Step 2: Getting through the pre-holes of the tv stand with G & H

Step 3: Put the Wing Nut on the Toggle Bolt (G) and then pass it through

the hole of the drywall

Step 4: Put all the toggle bots and buts into the drywall

Step 5: Screw up all the toggle bots





step2

Recommended Number of People for Assembly 2.








step5



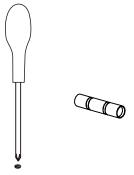



Tools Required




How to adjust the door hinge/hinge.


This screw of the door hinge can adjust the left and right clearance of the door

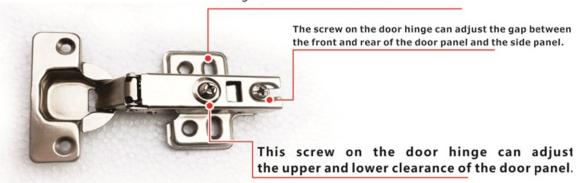

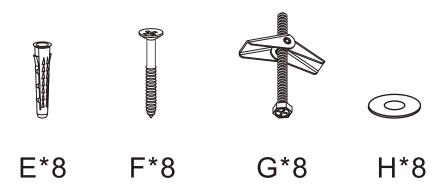


If the door is uneven once assembled, you can adjust the hinges like following

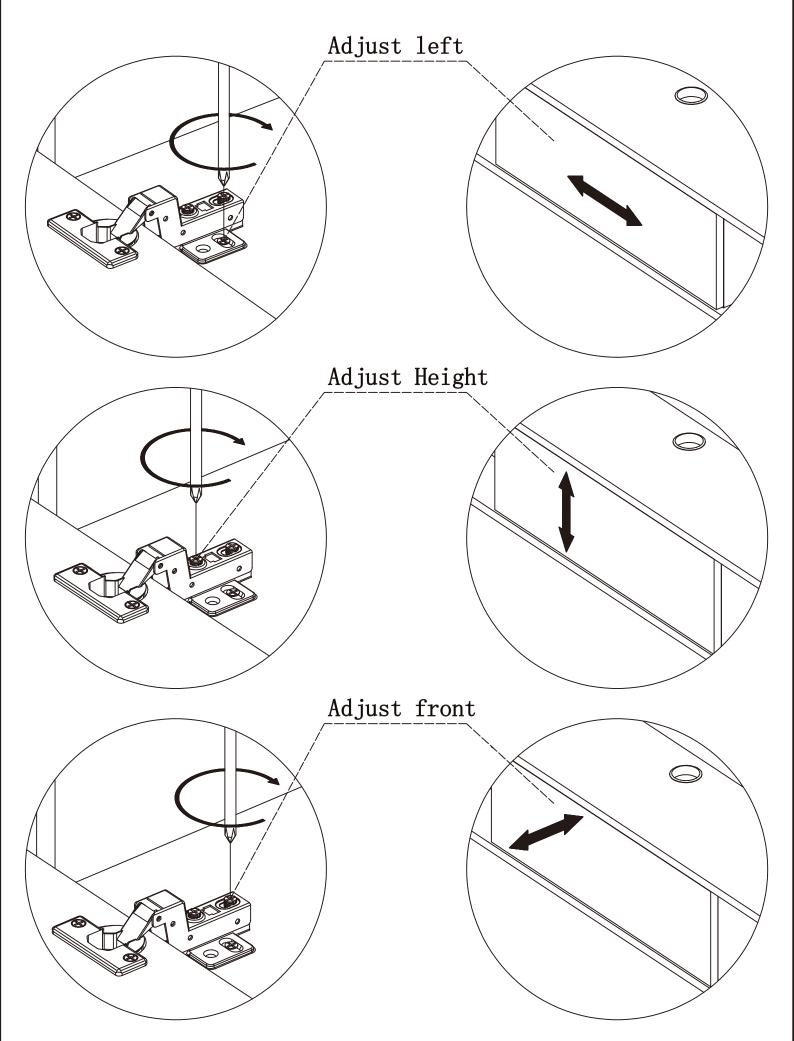


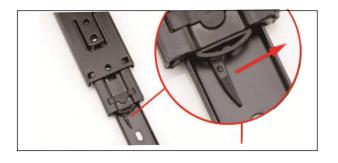


Tool-free removal: Slide the rail in the arrow direction to detach.


Simultaneously push upward and downward with both hands to remove the drawer for wall mounting.

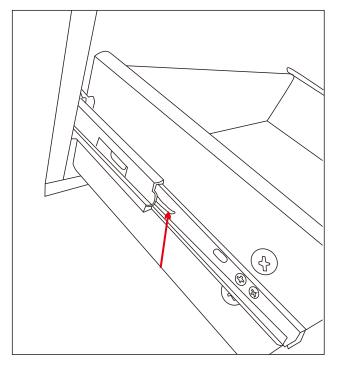

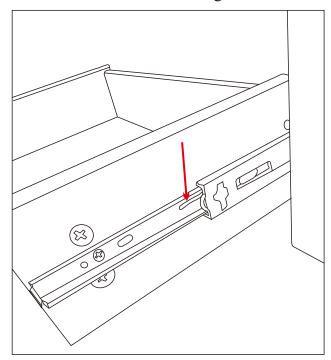

After mounting the unit on the wall. install the drawer by aligning the slides on both sides and gently pushing inward to complete the installation.

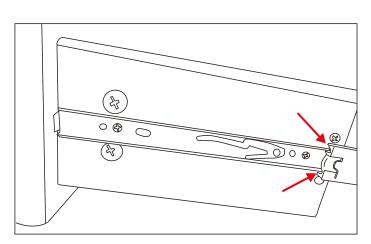

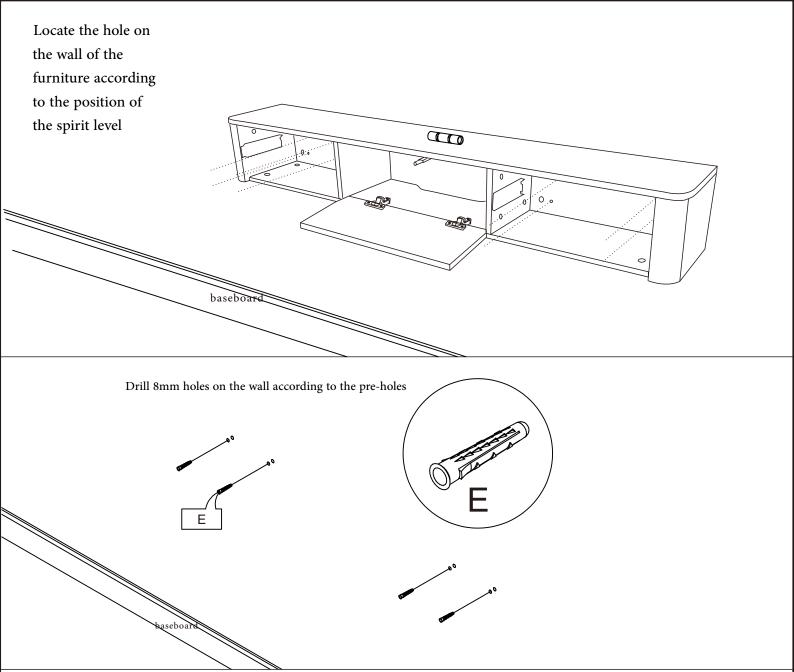

If you have drywall, please use replacement parts G and H to mount it on the wall (check the steps on page 1)

Tools Recommended For Assembly: Power screwdriver

