


G21-Installation Instructions

(Please refer to the installation video on the product link, or the installation video on YouTube)

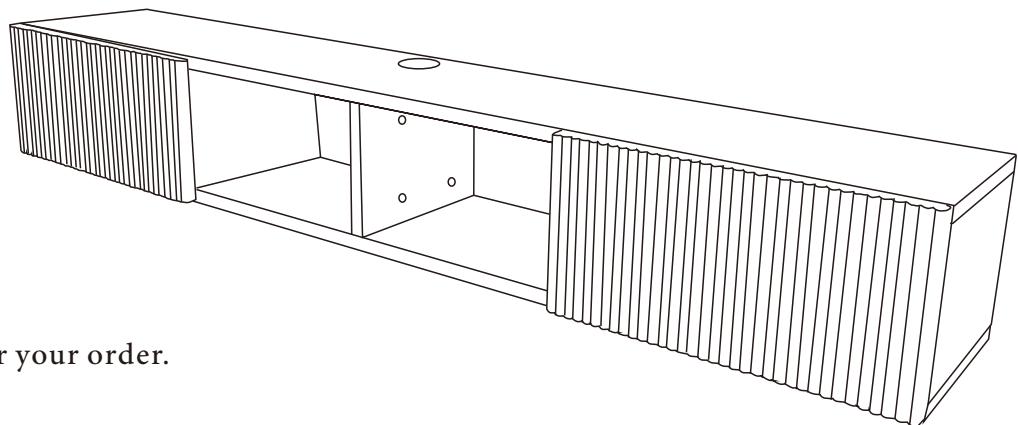


Dear customer, Thanks for your order.
If you have any questions.
please feel free to contact us directly.

Included 8mm screws and anchors
for solid brick walls.
load-bearing walls.
and firedhollow brick walls



If you have drywall, please use the
18mm drill bit(not included) and the
toggle bolts for mounting (package included).
Follow the steps below for mounting on the drywall

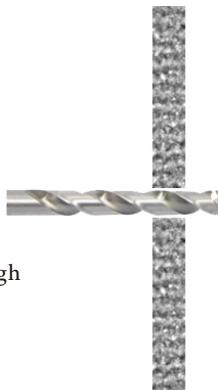


step1




step2

- Step 1: Drill 18mm hole on the drywall
- Step 2: Getting through the pre-holes of the tv stand with G & H
- Step 3: Put the Wing Nut on the Toggle Bolt (G) and then pass it through the hole of the drywall
- Step 4: Put all the toggle bots and buts into the drywall
- Step 5: Screw up all the toggle bots

Recommended Number of People for Assembly 2.

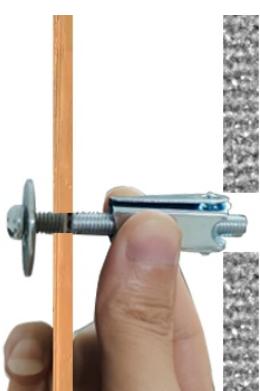

step3

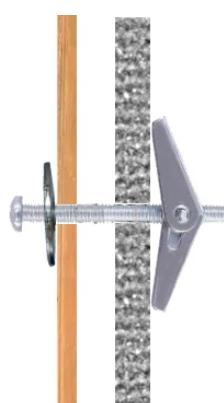


step4



step5

Tools Included

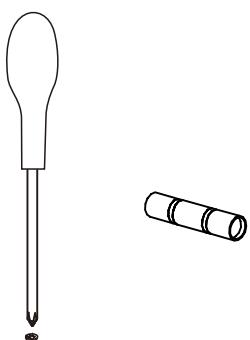

Tools Required





How to adjust the door hinge/hinge.

This screw of the door hinge can adjust the left and right clearance of the door


The screw on the door hinge can adjust the gap between the front and rear of the door panel and the side panel.

This screw on the door hinge can adjust the upper and lower clearance of the door panel.

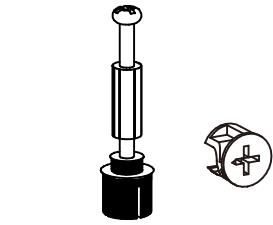
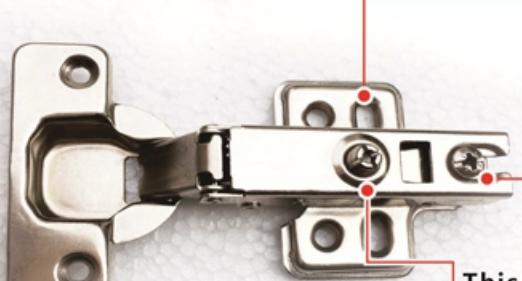


3-in-1 fastener screws

Unscrew it to the left and screw it to the right

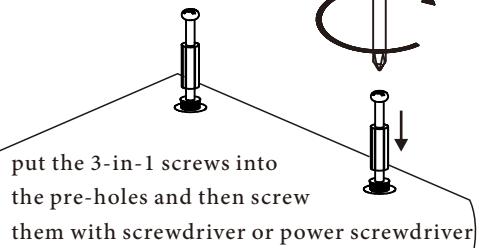



put the 3-in-1 screws into the pre-holes and then screw them with screwdriver or power screwdriver

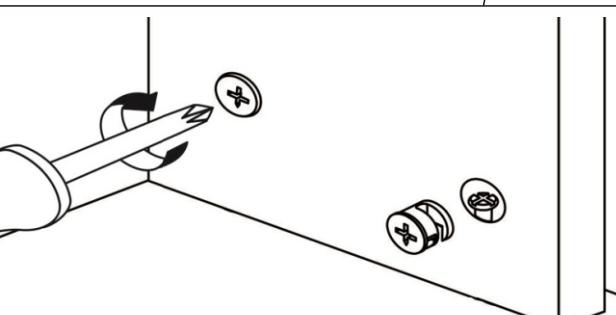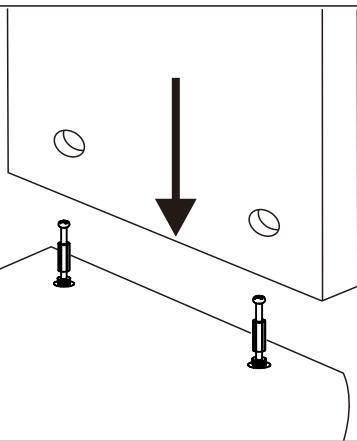



put the fasteners into the holes and screw it with a screwdriver

If the door is uneven once assembled, you can adjust the hinges like following



Adjust left

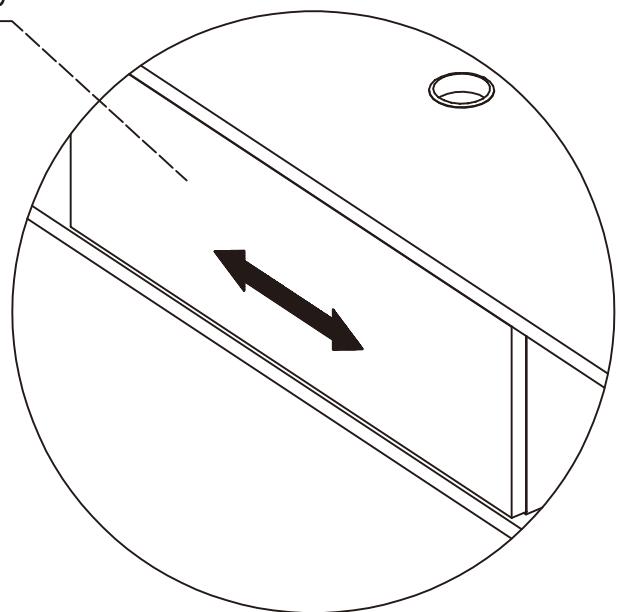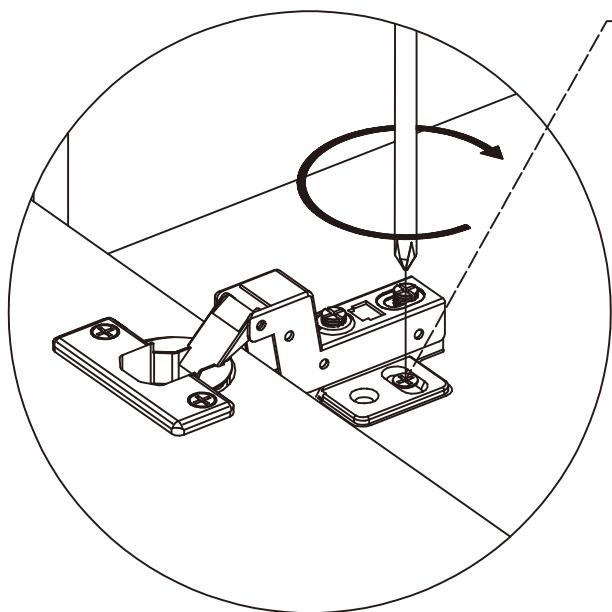










Adjust Height

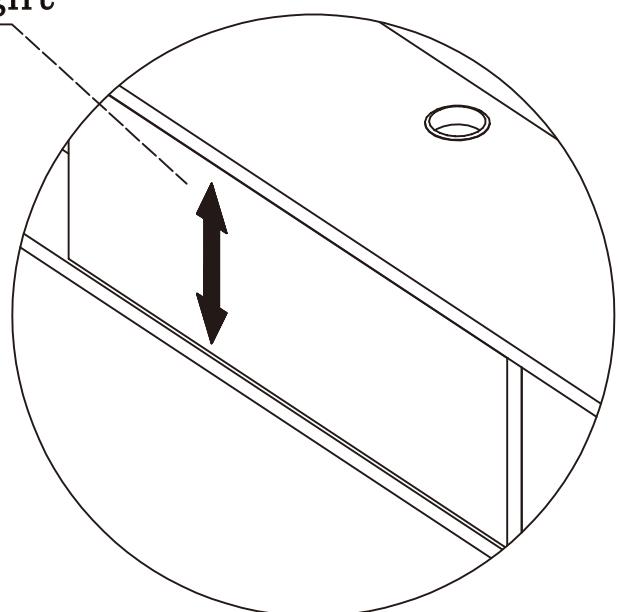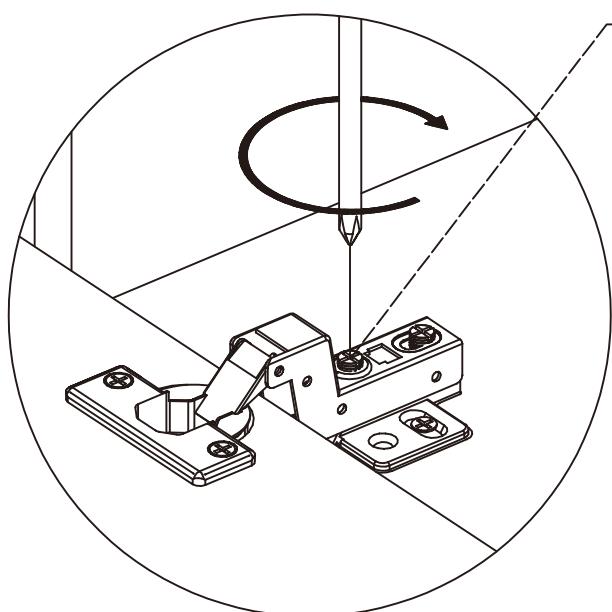

Adjust front

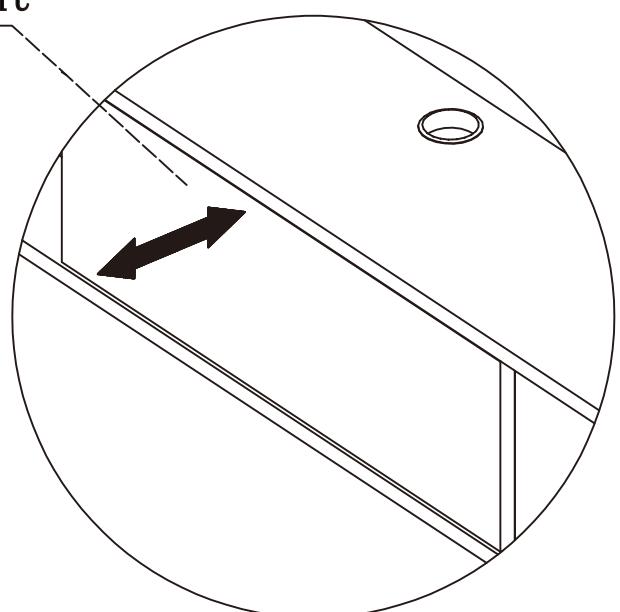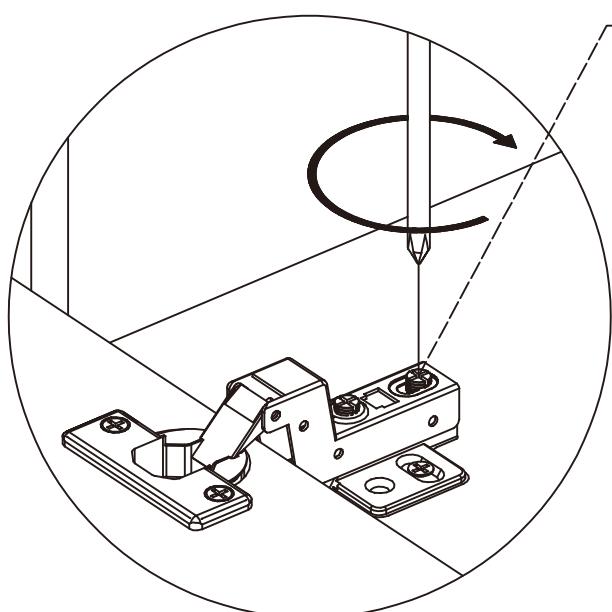


package Included

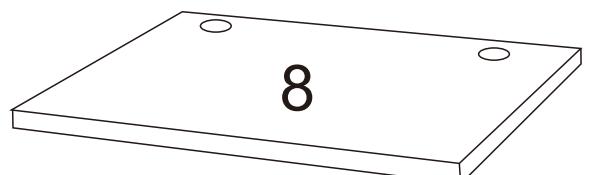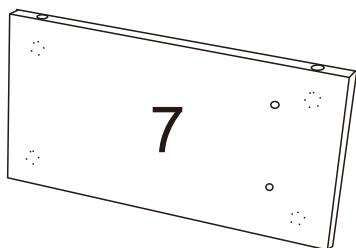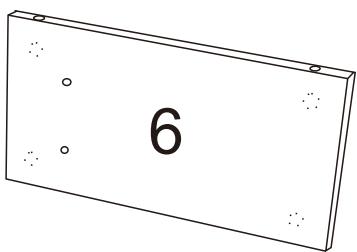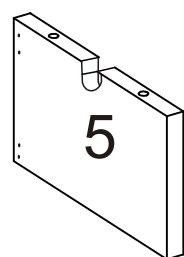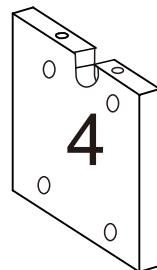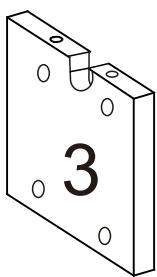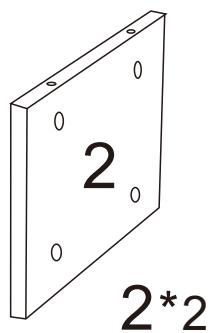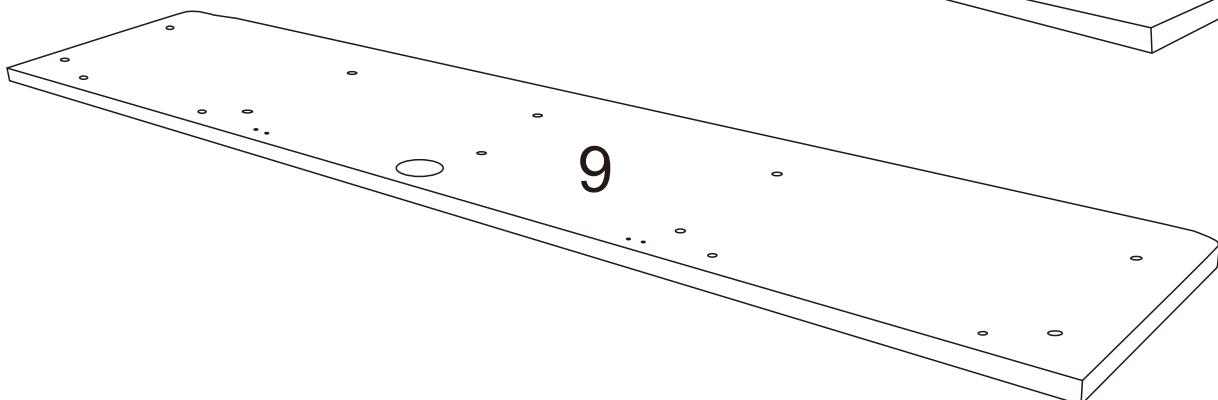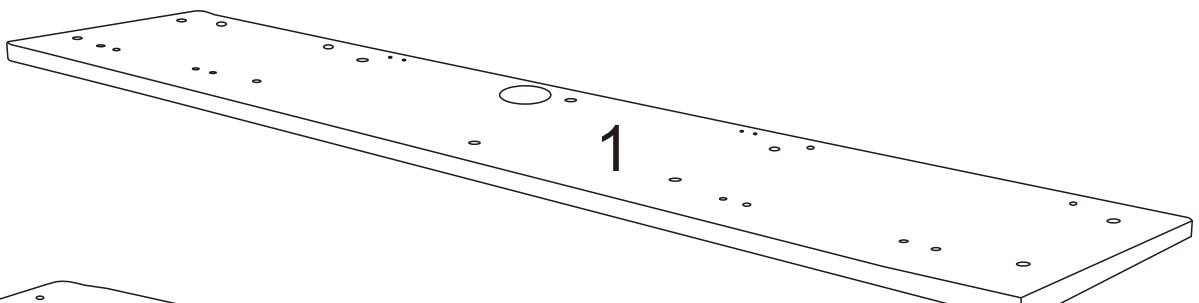

8*2

 package Included




A*28



B*28




C*24

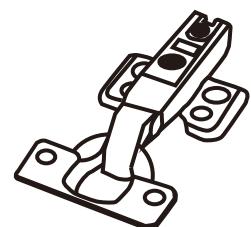


D*4



 E*8



F*8

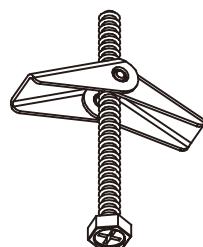


G*8



H*8









stickers

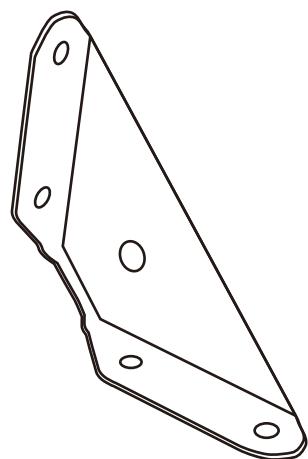



L*4

Make sure Screw up all the screws

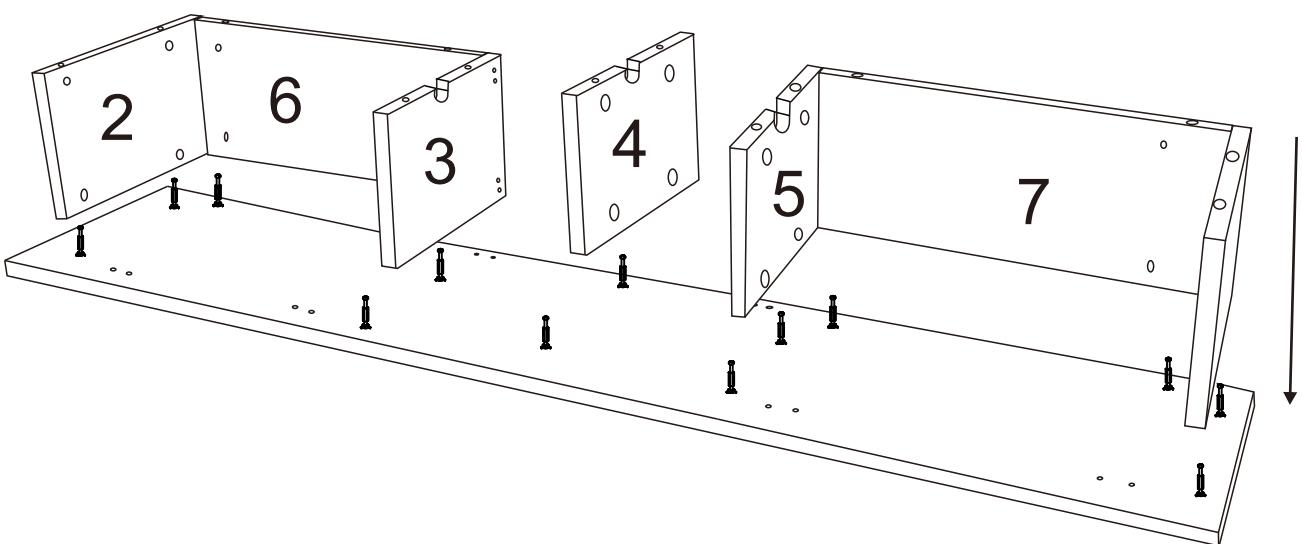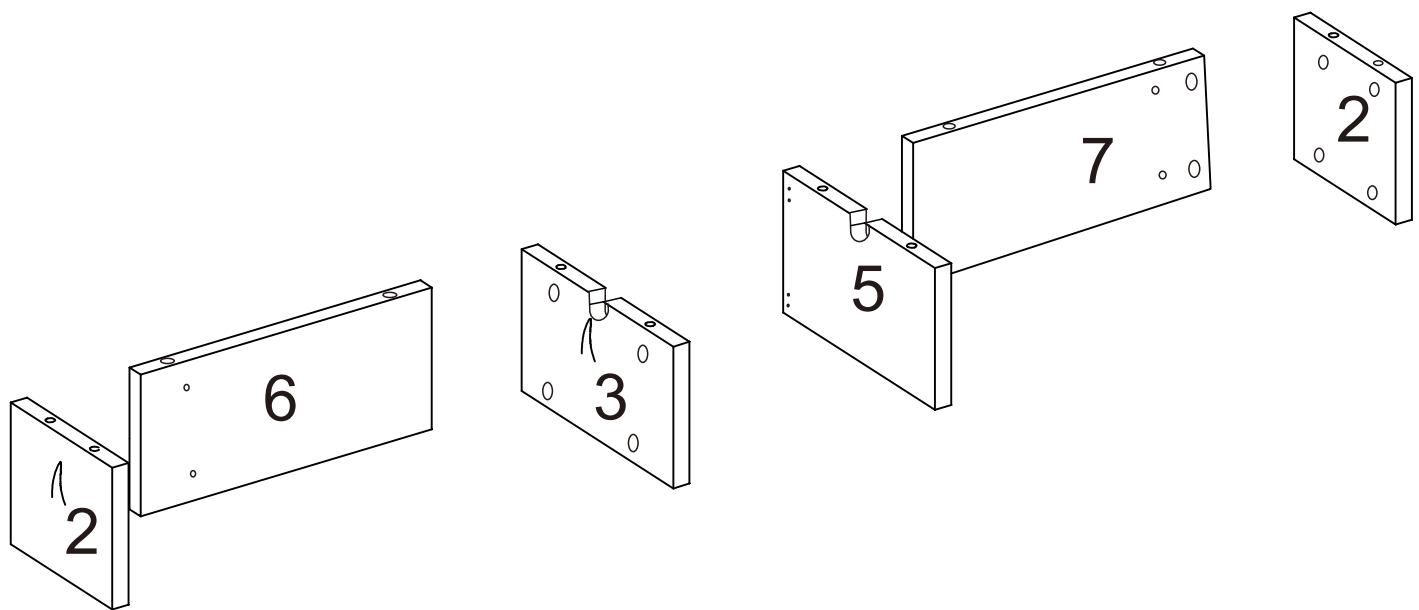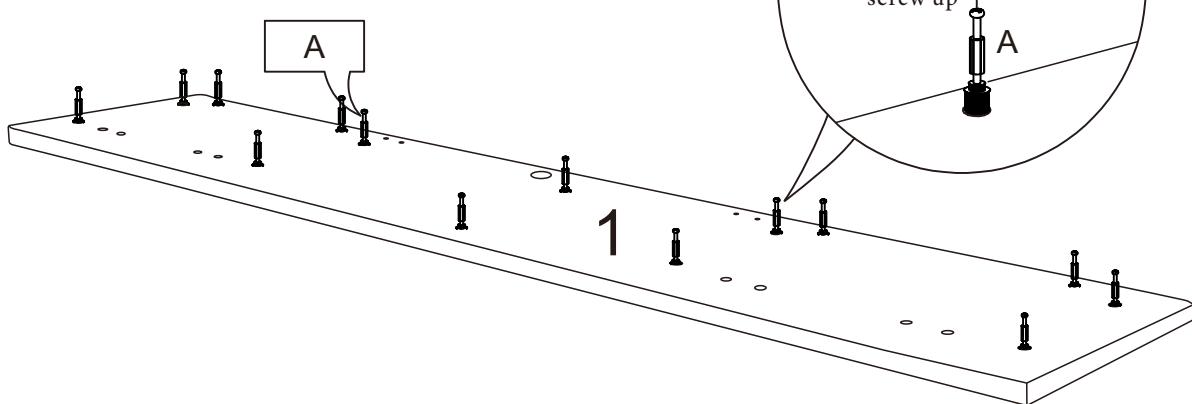


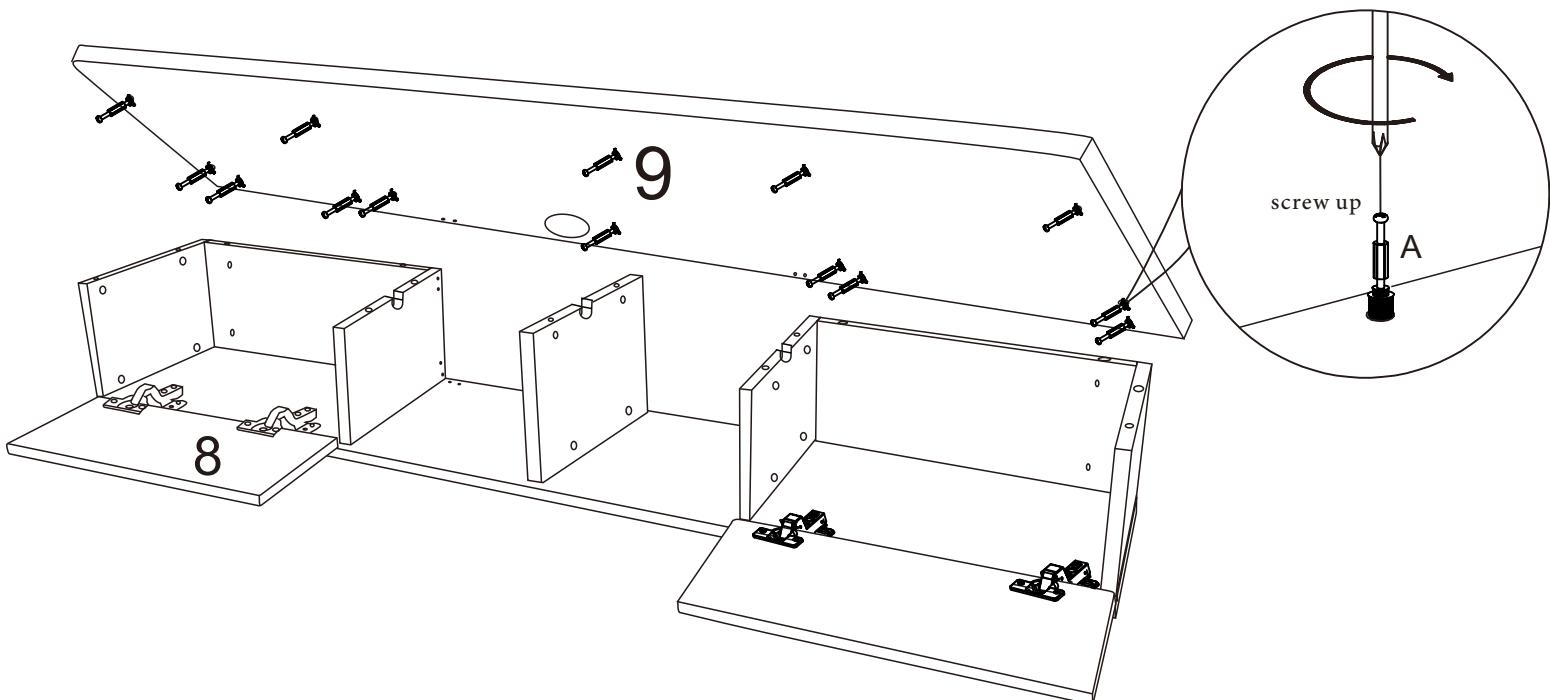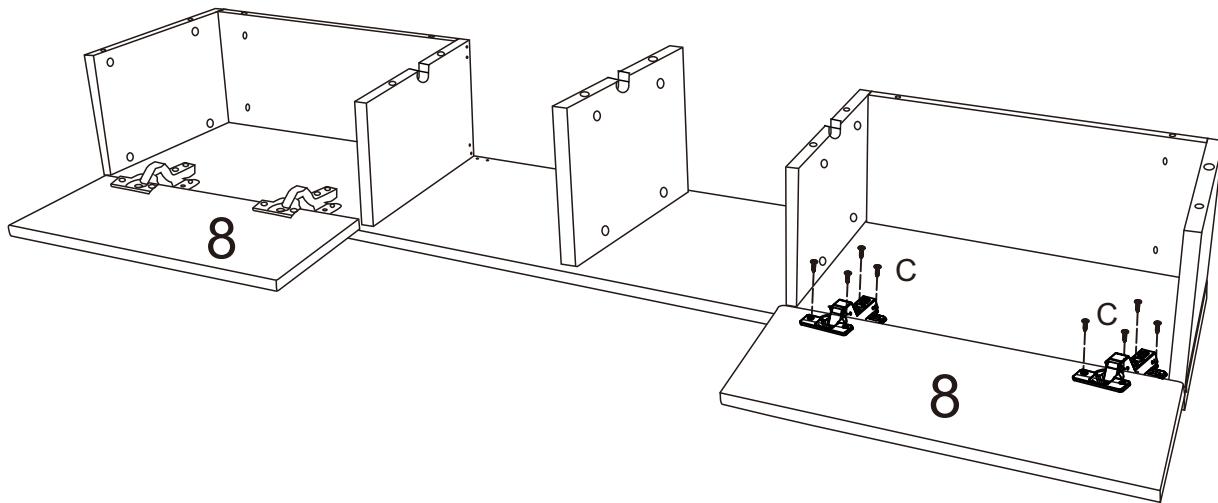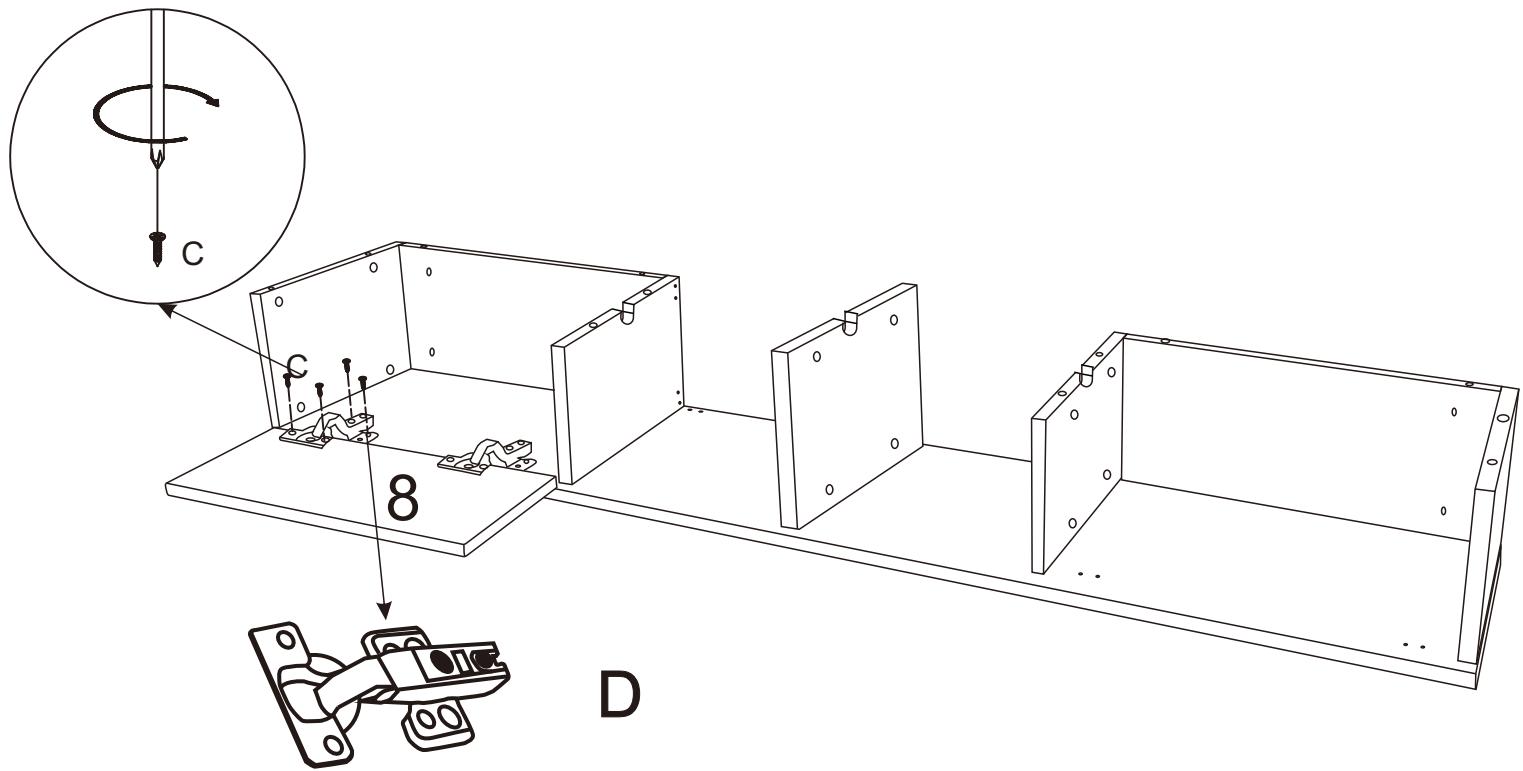


At last, check all the fasteners once more and tighten them.

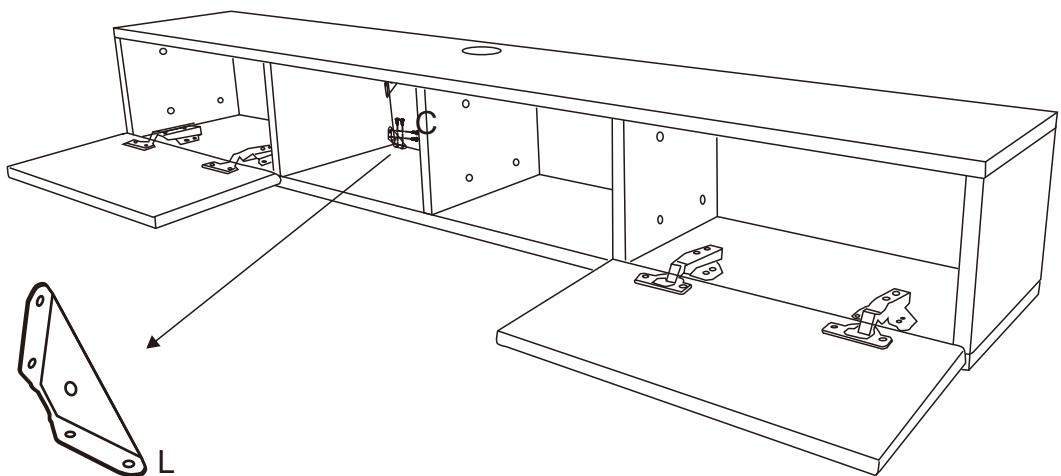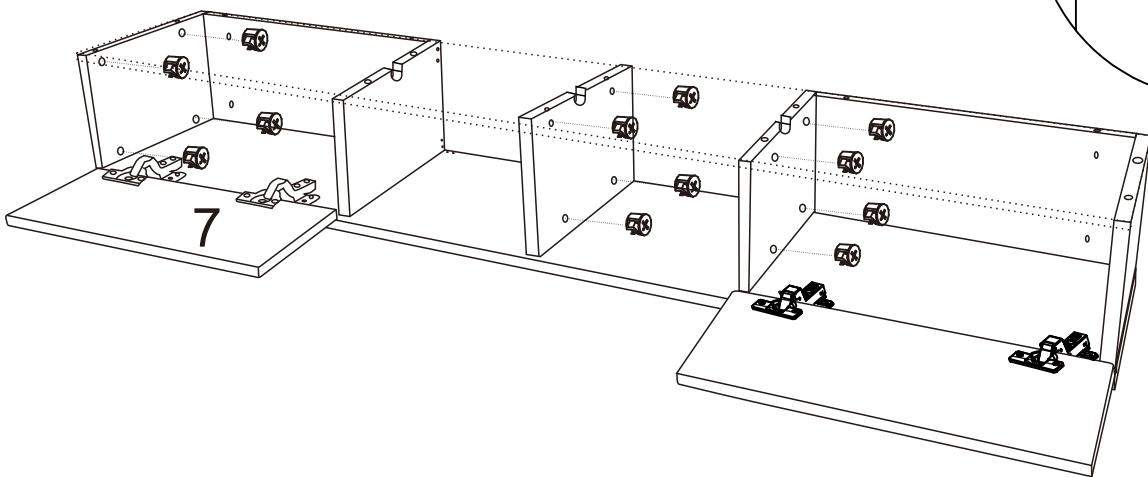

Locate the hole on
the wall of the
furniture according
to the position of
the spirit level

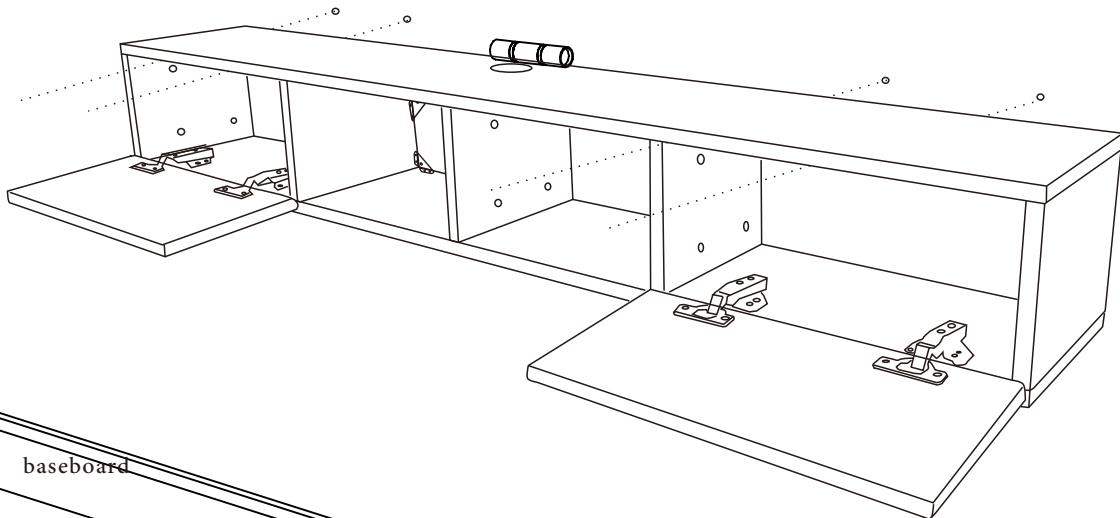

Drill 8mm holes on the wall according to the pre-holes

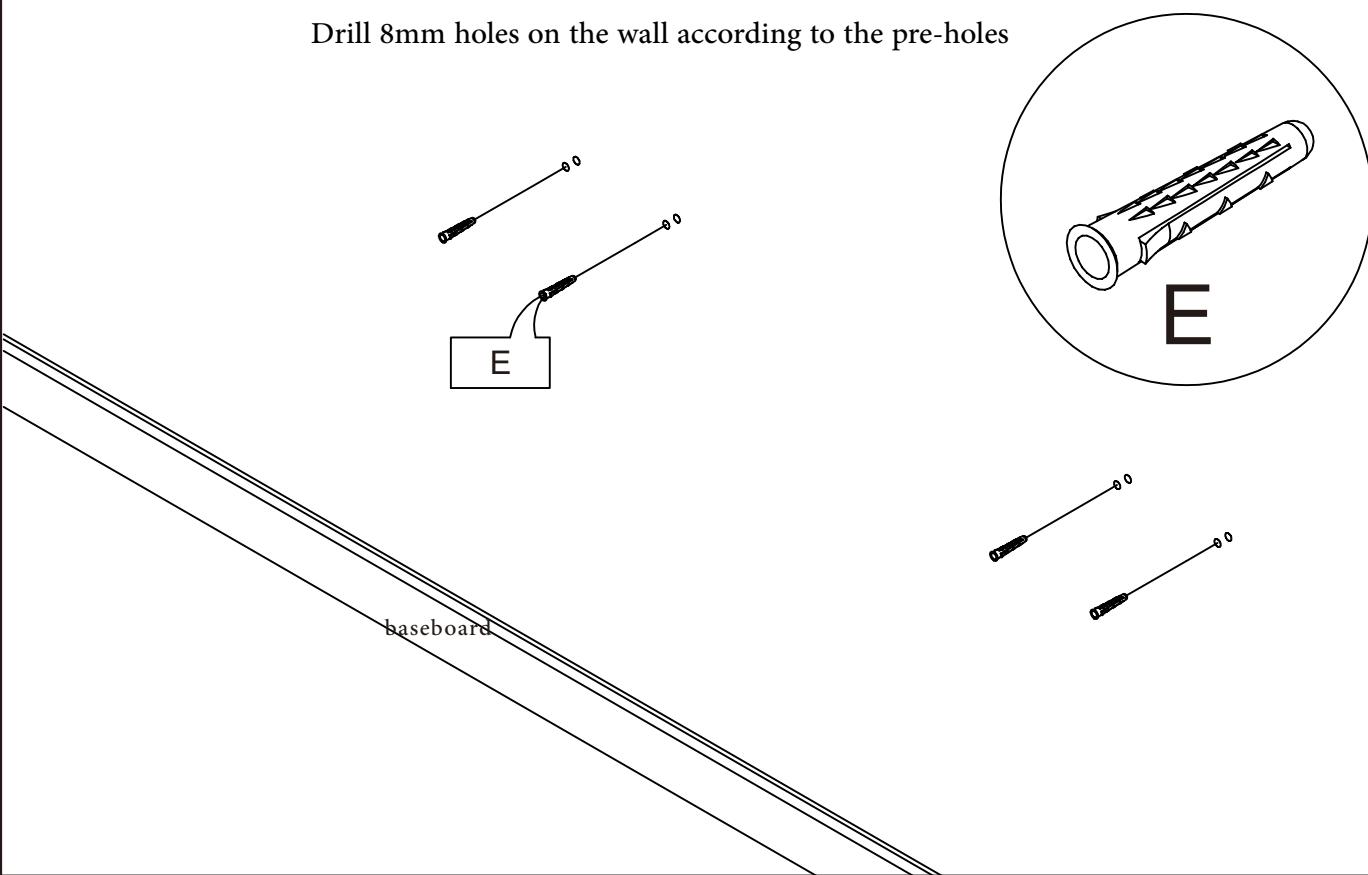

If you have drywall, please use replacement parts G and H to mount it on the wall
(check the steps on page 1)

Tools Recommended For Assembly : Power screwdriver

Once assemble done, put stickers to disguise the exposed screws

