
#### G23-Installation Instructions

(Please refer to the installation video on the product link, or the installation video on YouTube)

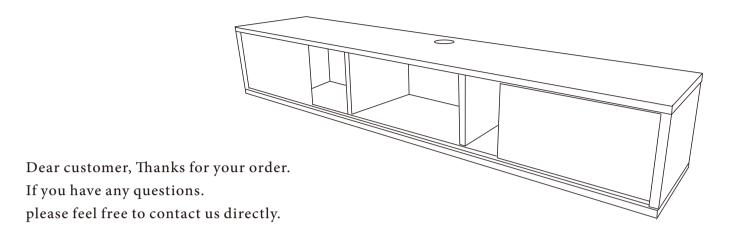

Included 8mm screws and anchors for solid brick walls. load-bearing walls. and firedhollow brick walls





If you have drywall, please use the 18mm drill bit(not included) and the toggle bolts for mounting (package included). Follow the steps below for mounting on the drywall

Step 1: Drill 18mm hole on the drywall

Step 2: Getting through the pre-holes of the tv stand with G & H

Step 3: Put the Wing Nut on the Toggle Bolt (G) and then pass it through

the hole of the drywall

Step 4: Put all the toggle bots and buts into the drywall

Step 5: Screw up all the toggle bots





step2


#### Recommended Number of People for Assembly 2.







## **Tools Included**

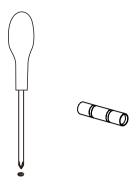


## **Tools Required**




How to adjust the door hinge/hinge.


This screw of the door hinge can adjust the left and right clearance of the door

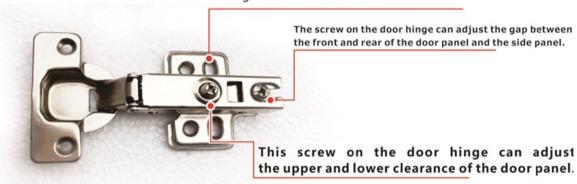




3-in-1 fastener screws

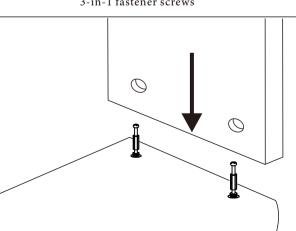


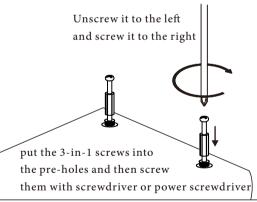

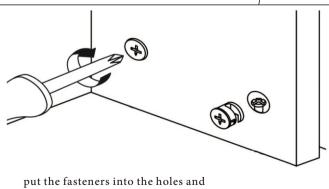


screw it with a scewdriver


If the door is uneven once assembled, you can adjust the hinges like following

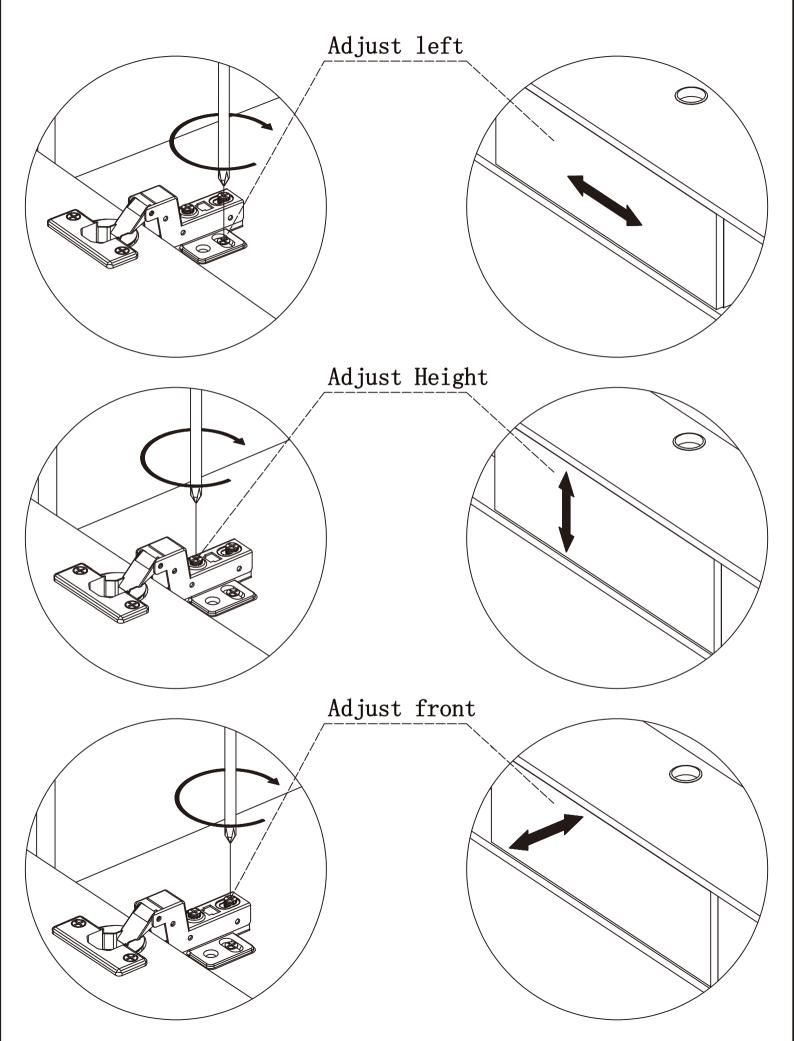


## package Included

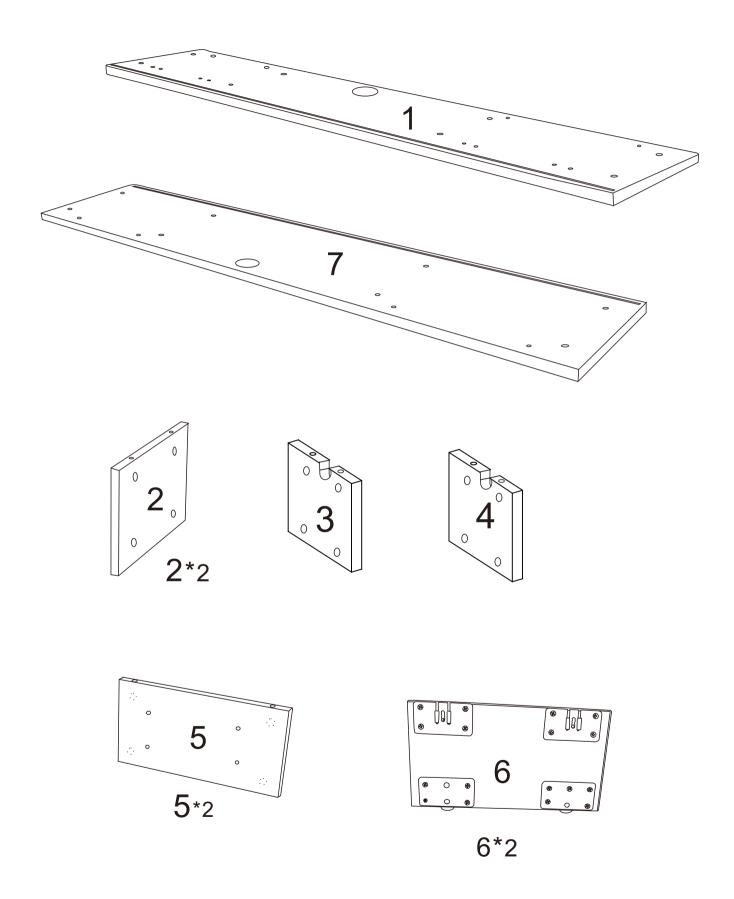



# package Included

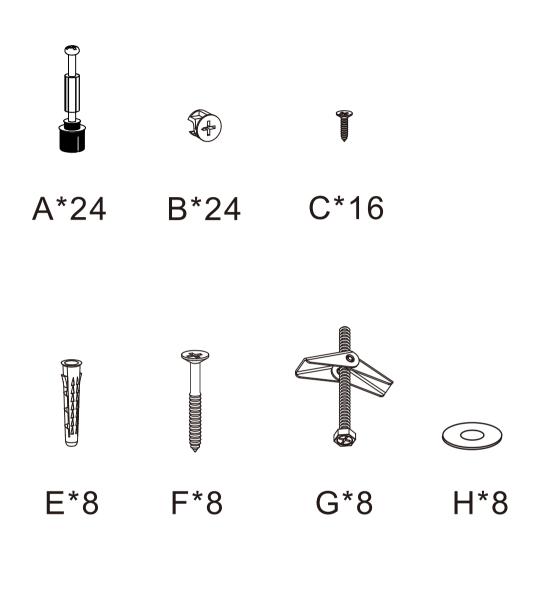





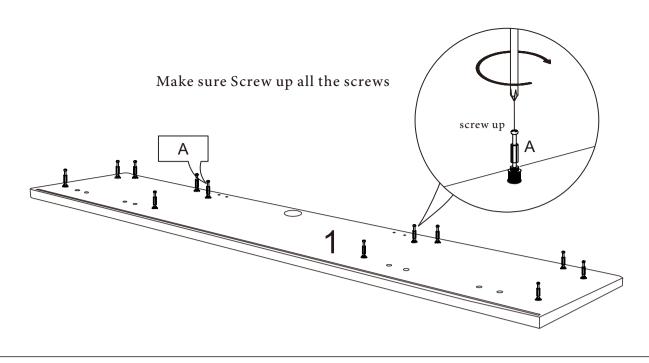

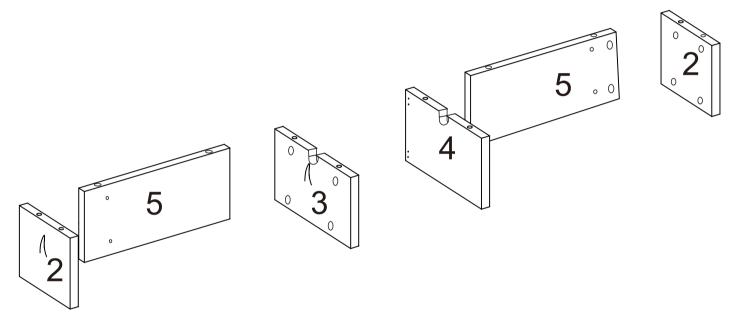


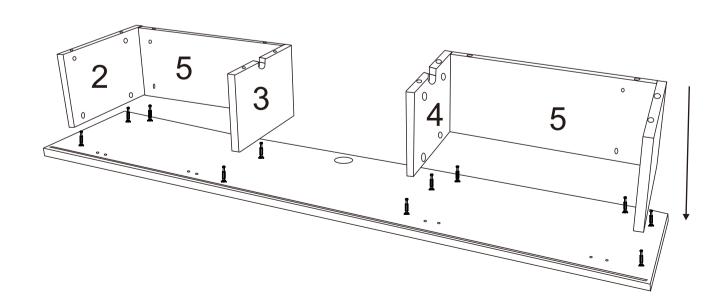


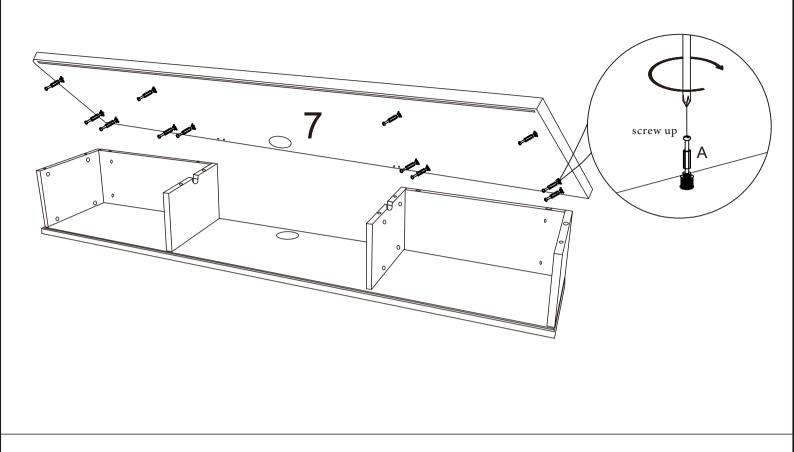

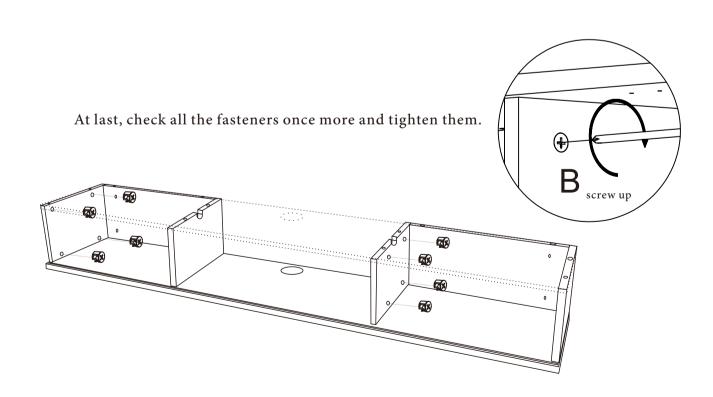

Locate the hole on the wall of the furniture according to the position of the spirit level

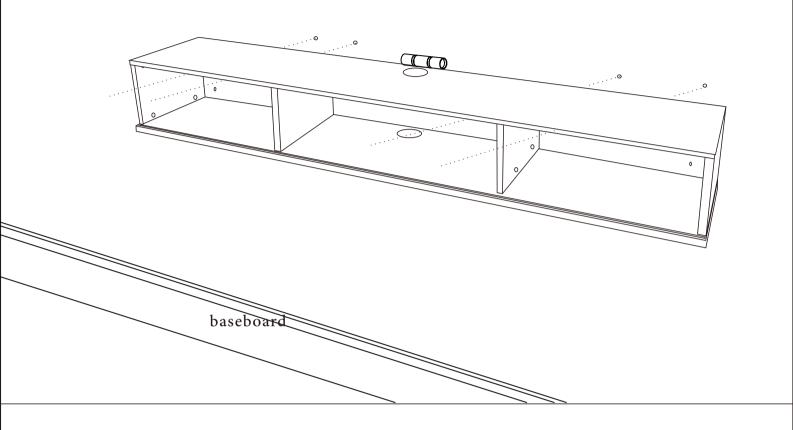

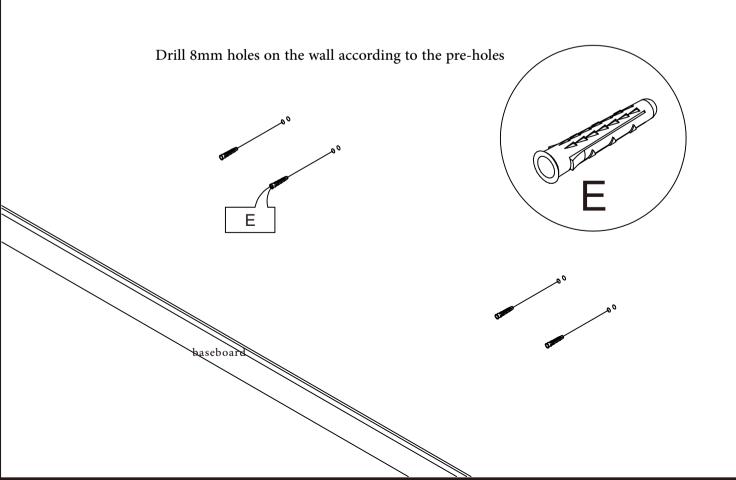

If you have drywall, please use replacement parts G and H to mount it on the wall (check the steps on page 1)

Tools Recommended For Assembly: Power screwdriver

Once assemble done, put stickers to disguise the exposed screws

