



Installation Instructions

(Please refer to the installation video on the product link, or the installation video on YouTube,
or feel free to contact us directly on Amazon.)

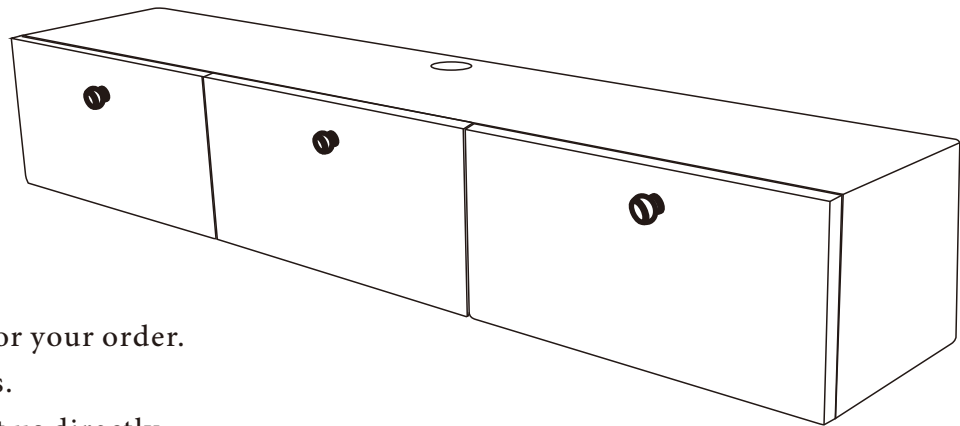

Dear customer, Thanks for your order.
If you have any questions.
please feel free to contact us directly.

Included 8mm screws and anchors
for solid brick walls.
load-bearing walls.
and fired hollow brick walls



If you have drywall, please use the
18mm drill bit(not included) and the
toggle bolts for mounting (package included).
Follow the steps below for mounting on the drywall

- Step 1: Drill 18mm hole on the drywall
- Step 2: Getting through the pre-holes of the tv stand with G & H
- Step 3: Put the Wing Nut on the Toggle Bolt (G) and then pass it through the hole of the drywall
- Step 4: Put all the toggle bolts and buts into the drywall
- Step 5: Screw up all the toggle bolts




step1




step2

Recommended Number of People for Assembly 2.

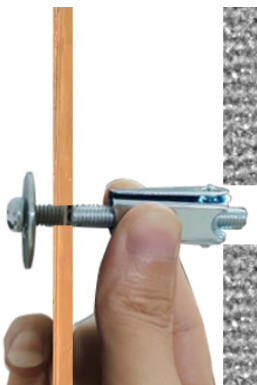

step3

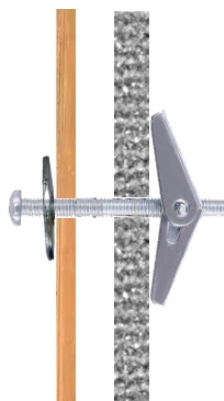


step4



step5


Tools Included

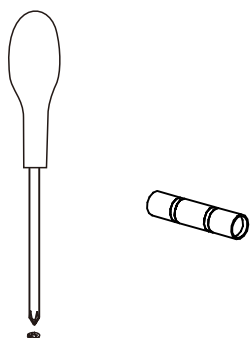


Tools Required




How to adjust the door hinge/hinge.

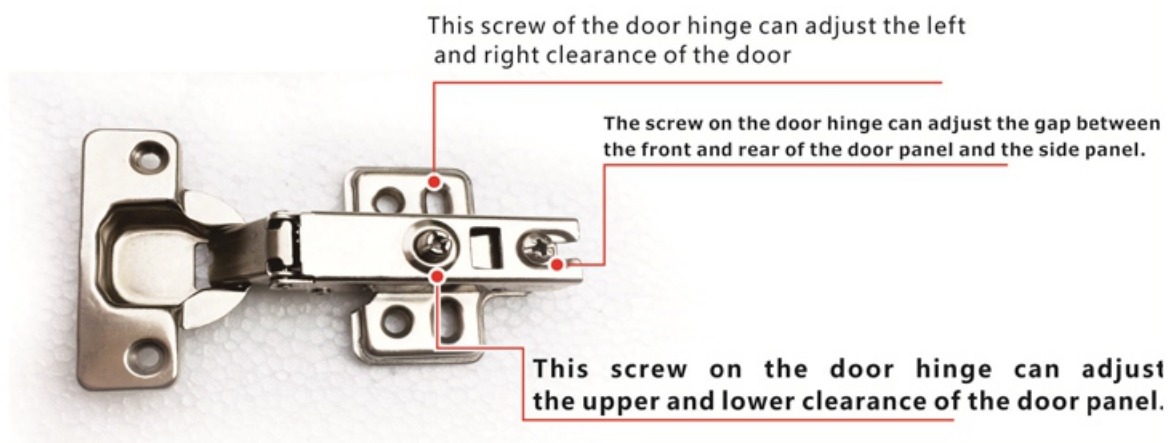

E*8



F*8

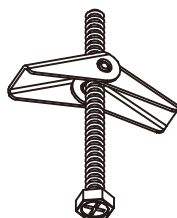

G*8



H*8

If there are handles, check the right pictures for installation




I*3



J*3





K*3


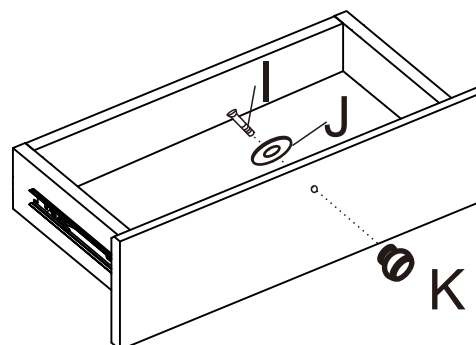


If the door is uneven once assembled, you can adjust the hinges like following



Adjust left

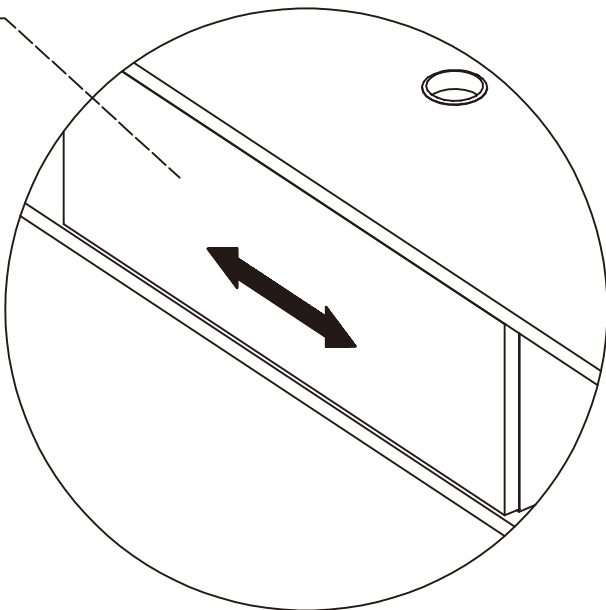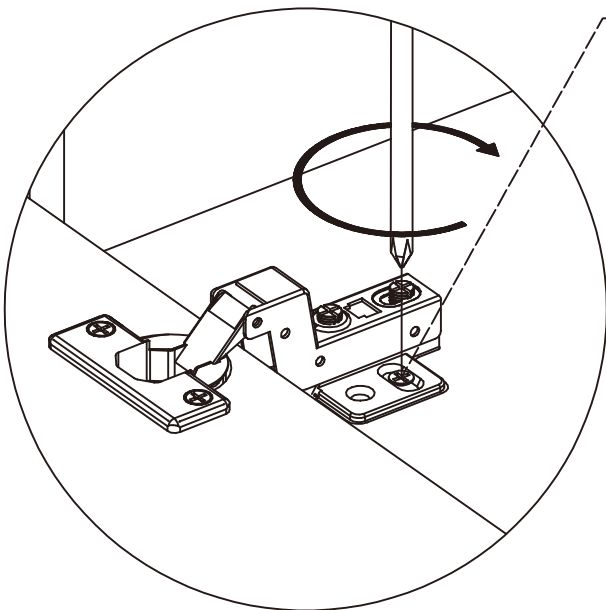


Adjust Height

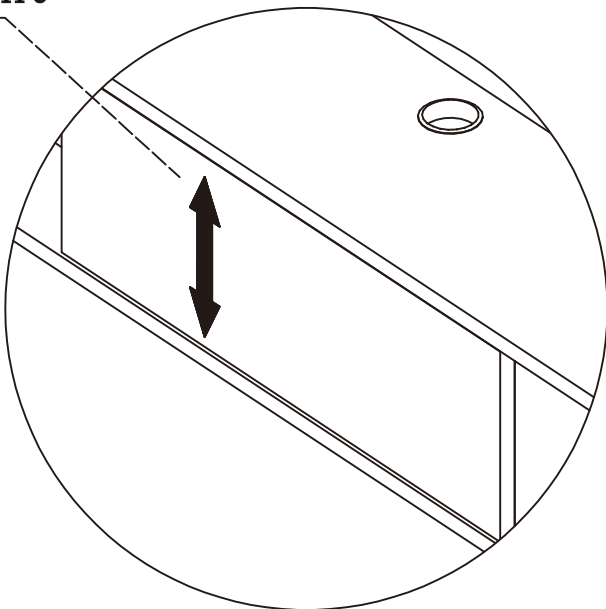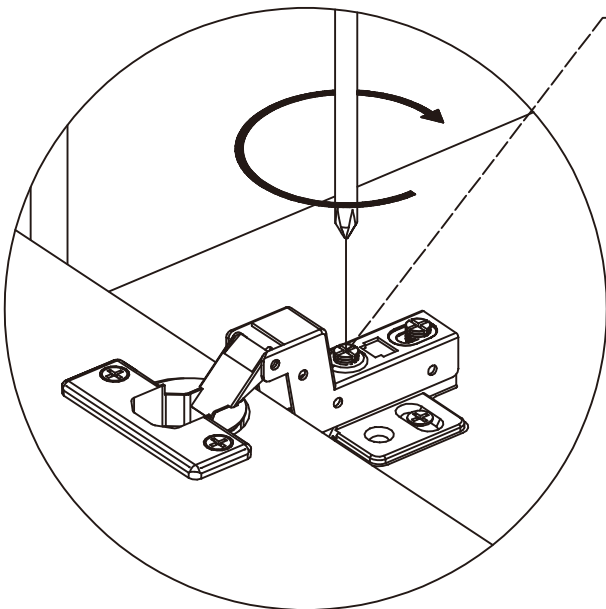



Adjust front

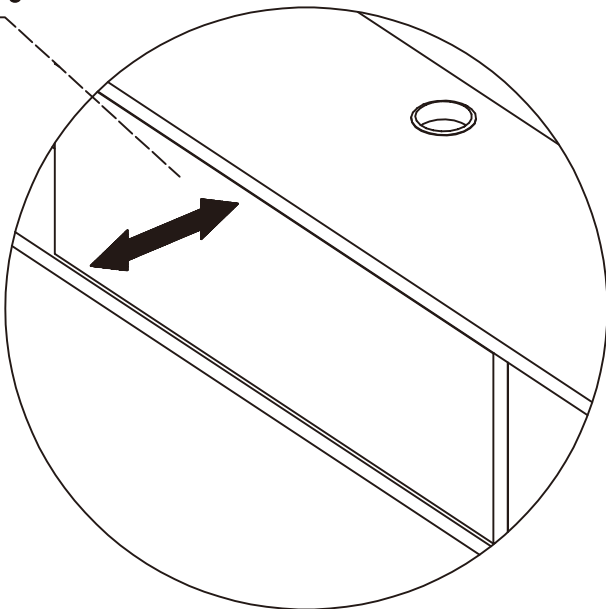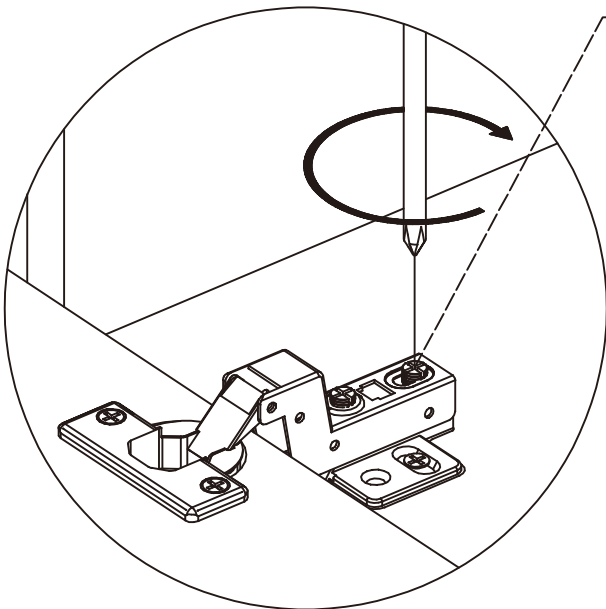

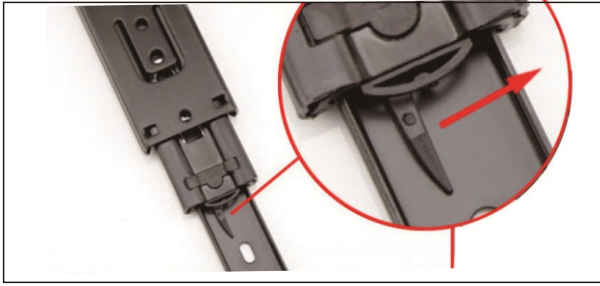


Tool-free removal: Slide the rail in the arrow direction to detach.


Simultaneously push upward and downward with both hands to remove the drawer for wall mounting.

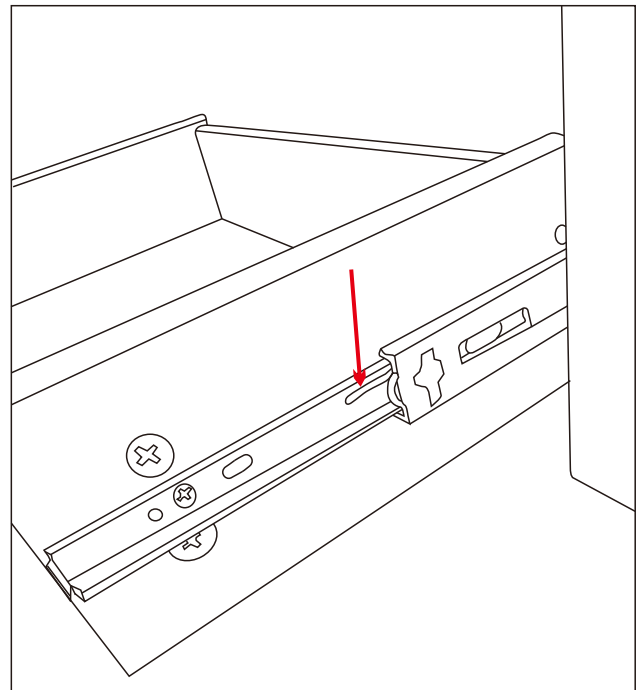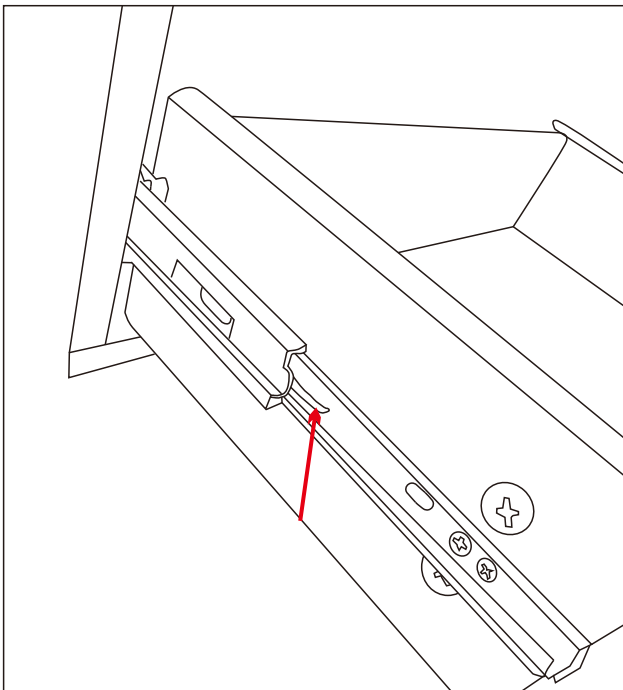

After mounting the unit on the wall, install the drawer by aligning the slides on both sides and gently pushing inward to complete the installation.



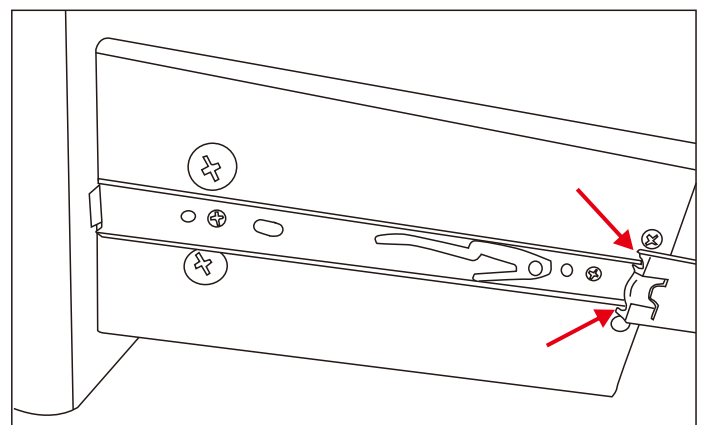


Locate the hole on
the wall of the
furniture according
to the position of
the spirit level

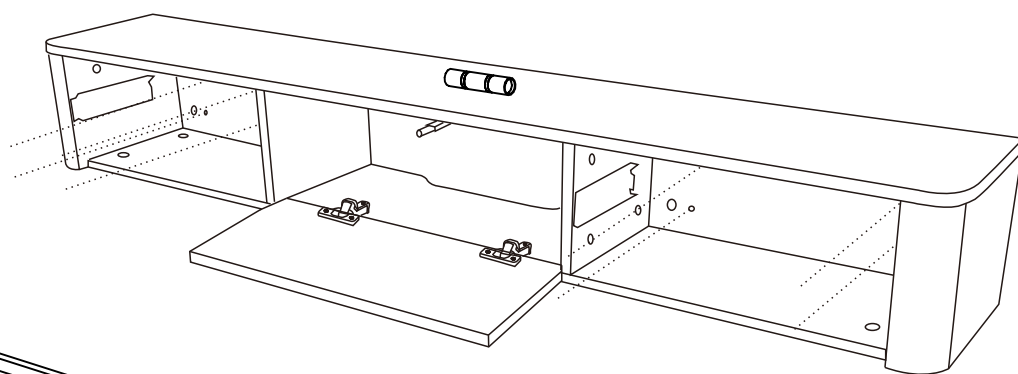

baseboard

Drill 8mm holes on the wall according to the pre-holes

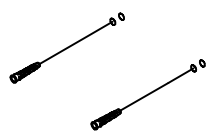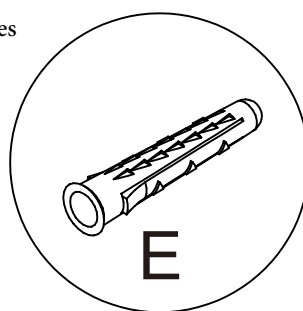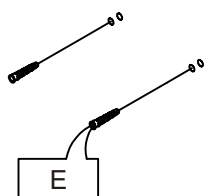

baseboard

If you have drywall, please use replacement parts G and H to mount it on the wall
(check the steps on page 1)

Tools Recommended For Assembly : Power screwdriver

